

electriciQ

USER MANUAL



2.5KG TUMBLE DRYER

eiQMTD2W

eiQMTD2B

**Thank you for choosing electriciQ
Please read this user manual before using this condenser tumble
dryer and keep it safe for future reference**

SETTLING IN OK?

We hope this has been helpful to you.

We would love to see how you're getting on with your new purchase, so please share any snaps you have on the platform of your choice below.

Our community awaits your uploads - Snap, tag and hashtag away!



@electriQUK
#electriQUK

WE'RE HERE TO HELP

Should you have any problems or questions with your purchase, please contact a member of our customer service team.

☎ 0330 390 3061

✉ support@electriQ.co.uk

Mon-Fri | 9am to 5pm

Unit J6, Lowfields Business Park,
Lowfields Way, Elland
West Yorkshire, HX5 9DA

CONTENTS

SAFETY	4
PRODUCT OVERVIEW	6
INSTALLATION	7
BEFORE EACH CYCLE	9
DRYING TIME REFERENCE	9
BEFORE EACH CYCLE	9
OPERATION	10
AFTER DRYING	11
CLEANING THE FILTER	11
TROUBLESHOOTING	12
TECHNICAL SPECIFICATION	12
SUPPORT	13

 
 
SAFETY INSTRUCTIONS

- Keep these instructions for use with the appliance. If the appliance should be sold or passed on to others, make sure that the instructions are passed on with it.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This tumble dryer is intended for normal domestic use only.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- It is not recommended that the dryer is placed directly next to ovens or cookers as the performance of the dryer may be affected.
- Do not stack the tumble dryer on top of other appliances without the correct stacking kit.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- It is important to clean the lint filter after each drying cycle or the restrictions to airflow will extend drying times and could cause the safety cut-out to trip.
- Under no circumstances should anything other than the recommended articles be placed in the tumble dryer.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- It is dangerous to alter or modify the product in any way other than which is stated in this manual.
- We recommend that the appliance is unplugged each time after use. It should always be disconnected from the mains.

- The rear of the dryer will get quite hot during use. Position the dryer so that the back is not accessible while in operation, but ensure that the sides have space available to allow adequate airflow
- The mains cable and plug assembly must only be replaced with a genuine part by the manufacturer or his service agents in order to avoid a hazard.
- It is important to clean fluff from the window of the dryer and around the door seal after each drying cycle. Failure to do so could result in water leaking and the door sealing properly.
- If you need to stop the tumble dryer before the end of a drying cycle, ensure that the load and appliance are cooled before opening the door.
- Once the load is removed, all items need to be quickly spread out so that any residual heat is dissipated.
- Remove all objects from pockets such as lighters and matches.
- DO NOT block the air inlets at the base and side of your dryer.
- DO NOT allow fluff to accumulate around the tumble dryer.
- DO NOT exceed the recommended maximum load.
- DO NOT place articles in the dryer if anything other than a water solution has been used in the cleaning process.
- DO NOT use the tumble dryer if you suspect that it is damaged or faulty in any way. Under no circumstances should you attempt to repair the appliance yourself. Repairs carried out by inexperienced persons can result in serious injury.
- Consult your local appointed service engineer and insist on genuine spare parts.
- The dryer must be installed by a competent person and following the instructions in this manual.
- Any electrical work required to install the appliance should be carried out by a qualified person.
- The tumble dryer should be serviced by an appointed service organisation and only genuine parts used.
- It is recommended that the dryer be serviced annually by a person competent to service tumble dryers.
- The mains cable and plug assembly must only be replaced with a genuine part available from the manufacturer or service agent.
- Packaging should be responsibly disposed of and kept away from children and pets.
- Keep pets away from the appliance.

 
- It could be possible for a child or pet to gain access to the tumble dryer through the door. Therefore, please check the drum before loading or starting the appliance.
- DO NOT use a two-way adaptor, or extension lead. The dryer must be connected to its own socket.
- DO NOT dry unwashed items in the tumble dryer.
- DO NOT attempt to dry dripping wet articles.
- The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.

PRODUCT OVERVIEW

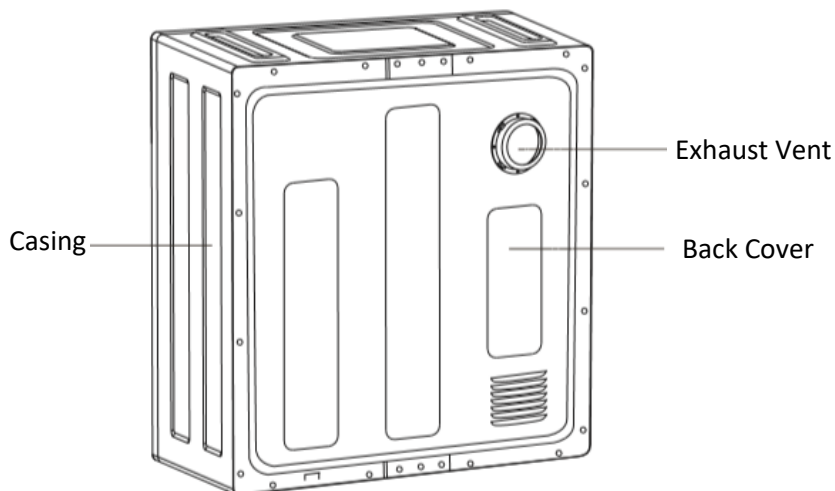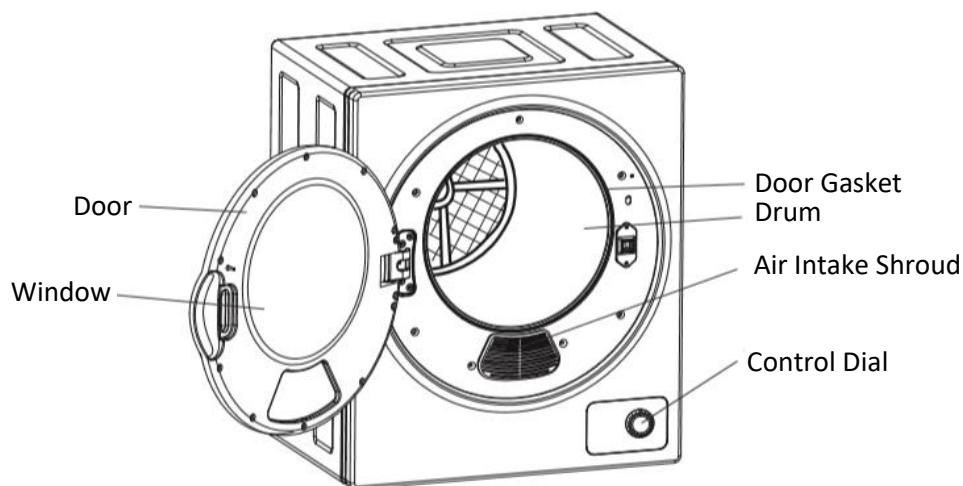



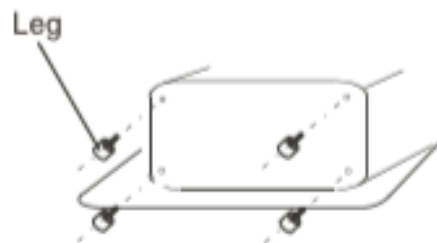


INSTALLATION


- The dryer must be installed in a clean dry place. Air must be able to circulate freely around the appliance.
- The dryer should be placed on a firm level surface to avoid unwanted noise and improve performance.
- Once the dryer is in its permanent position check that the dryer is level with the aid of a spirit level.
- Ensure that the voltage of the power supply is the same as the electrical specifications of the appliance.
- Do not place on top of any existing appliance, such as a dishwasher or washing machine.
- Attach the provided legs to the bottom of the unit.




WALL MOUNTING INSTALLATION

WALL MOUNTING KIT			
DESCRIPTION	Hanging brackets		2
	Plastic spacers		2
	Exhaust connector		1
	12mm screws		4
	25mm screws		4

 1. Determine the dryers' position on the chosen wall. Ensure that no piping or writing is behind the wall. A minimum of 50 mm is needed between the top of the dryer and the ceiling for ease of installation.
2. Mark two holes onto the chosen wall 450mm apart.

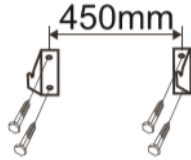


 3. Align the hanging hooks and fasten in the screws, ensuring they are secure.


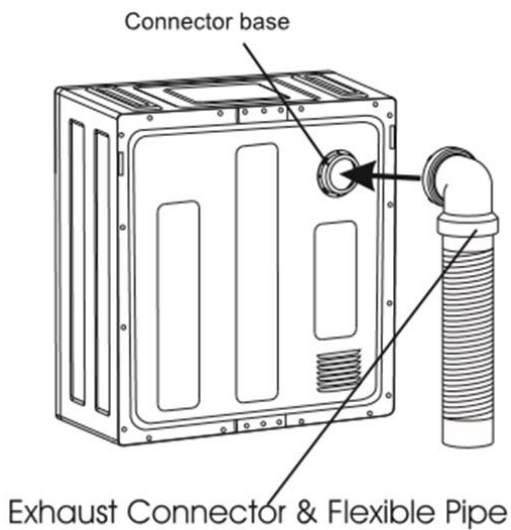


4. Adjust the exhaust connector direction, then install onto the unit's connector.

 5. Turn the exhaust connector clockwise until it fits into the connector groove.

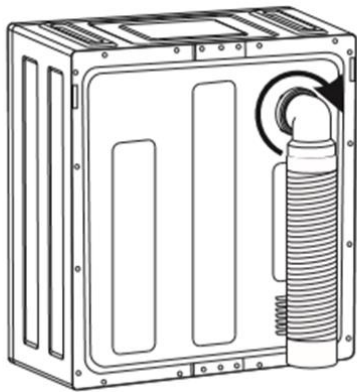

  6. Using the 4x12mm screws, fix the 2 spacers. (See below). Then with assistance, mount the dryer onto the wall bracket.

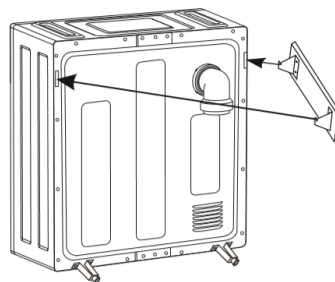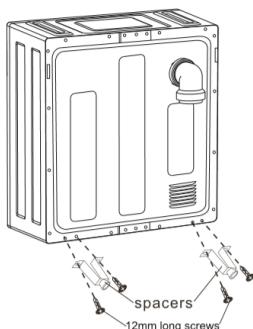

DRYING TIME REFERENCE TABLE

Drying times can be affected by many factors such as material, heaviness of load, and full the dryer is etc. The below is a guide only.

DRYING CAPCIY	DRYING TIME
Approx. 0.5kg	Approx. 30 min
Approx. 1.0kg	Approx. 60 min
Approx. 1.5kg	Approx. 120 min
Approx. 2.5kg	Approx. 200 min

BEFORE EACH CYCLE

Leave the dryer to stand for 2 hours before first use.

Use a soft fabric cloth to clean inside the drum.

- Before drying, thoroughly spin the laundry in the washing machine.
- Sort the laundry according to fabric type and drying programme.
- Before drying, close zips, hooks, and eyelets, button up and tie fabric belts.
- Do not dry articles containing rubber or small elastic materials.

TIPS BEFORE DRYING

Prior to loading the dryer, check that the items do not have the following symbols anywhere on them. If they do, do not tumble dry these items.



Dry flat



Dry in the shade



Do not tumble dry

 


Hang to dry



Drip dry


CONTROL DIAL

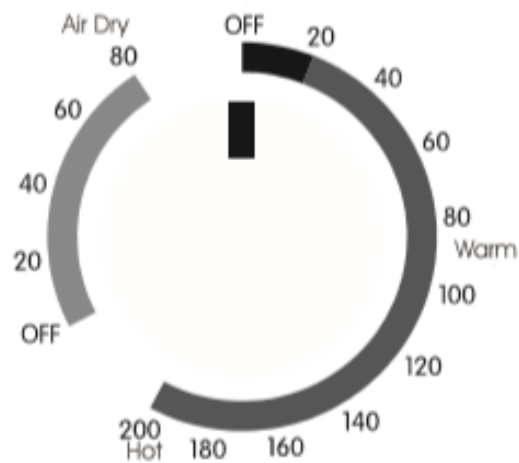


OPERATIONS

DIAL	Use the dial to set how long the dryer will be in operation for and which setting it will work at.
OFF	When the drying function has finished, the dial will return to the off position.
COOL (20)	This function is used to cool down the drying. When the dryer has finished its cycle and the dial is in the OFF position, turn it to "20" and the dryer will run with cool air for 20 minutes.
AIR DRY (80)	This function uses cool air to dry your clothing. It is ideal for "freshening" your clothes.
HOT (200)	The maximum time setting is perfect for drying large quantities of clothing.
WARM (80)	The warm setting has an anti-wrinkle function for items that are difficult to iron. This is best used for smaller loads, and set between 30-60 minutes.

 
AFTER DRYING

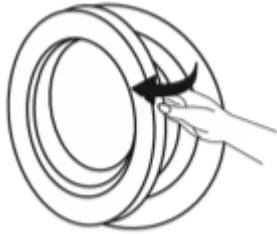

 Open the door and remove the dry clothes

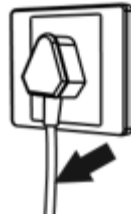

 Turn the power off and unplug the appliance

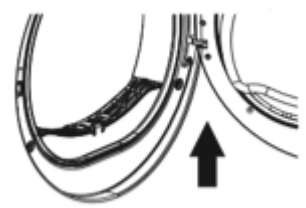


Clean the filter

CLEANING THE DOOR FILTER

Disconnect the power before cleaning.

 Do not operate the dryer without the filter.

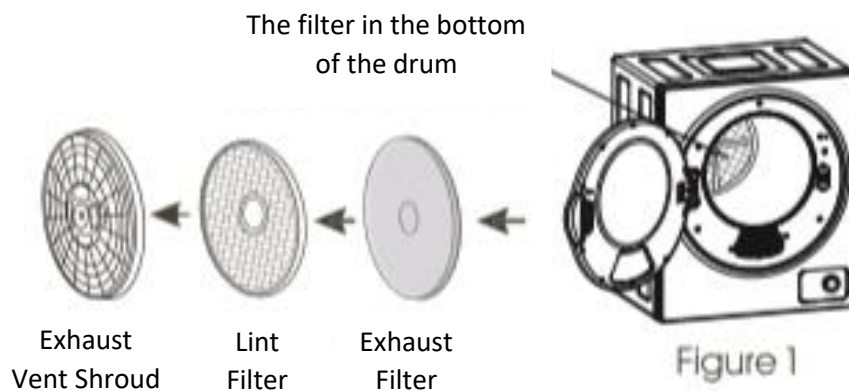

1. Open the door.
2. Remove the filter tray.
3. Clean the filter tray by wiping off the lint and fluff that has been accumulated.
4. Reinstall the filter tray.

CLEANING THE AIR INTAKE SHROUD



The filter should be cleaned once a month. Remove by pulling outwards, holding the upper and lower ends of the shroud. Remove the filter inside and clean it with a soft brush or cloth. Reinstall before next use.

TROUBLESHOOTING

PROBLEM	SOLUTION
Water is leaking	Make sure the dryer is level. Check that the door is not blocked.
Door swings open	Press the door shut until it clicks into place. Check the appliance is not overfilled.
Humidity in the room	The room must be well ventilated. Clean the air inlet.
Clothes are not dry	Clean the lint filter. Clean moisture sensors. Use next higher drying programme.

PRODUCT FICHE

Brand	electriQ
Model	eiQMTD2W eiQMTD2B
Dryer type	Air vented
Rated capacity	2.5kg
Energy efficiency class 1	C
Energy consumption 2	197 kWh
Automatic or non-automatic	Non-automatic
Eu ecolabel	N/A
Energy consumption of the standard cotton programme at full load	1.71kWh
Energy consumption of the standard cotton programme at partial load	0.87kWh
Power consumption of the off mode (po)	0W
Power consumption of left on mode	0W
Duration of the left on mode	n/a
Weighted programme time of the standard cotton programme at full load	125min
Weighted programme time of the standard cotton programme at partial load	88min
Programme time of standard cotton at partial load	61 min
Sound power level for the standard cotton programme at full load	57db
Cotton + standard programme, which is the standard cotton programme used at full and partial load is the standard drying programme to which the information in this fiche relates.	

SPARE PARTS

Spare parts can be obtained from your supplier using the following codes:

EXHAUST FILTER	1010900900023
AIR INTAKE FILTER	101090000001
EXHAUST HOSE ASSEMBLY	801010240001

electriQ UK SUPPORT

 
www.electriQ.co.uk/support

Call: 0330 390 3061

Office hours: 9AM - 5PM Monday to Friday

www.electriQ.co.uk

Unit J6, Lowfields Business Park
Lowfields Way, Elland
West Yorkshire, HX5 9DA

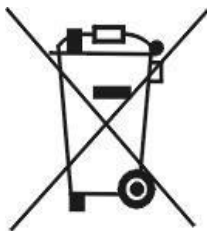

Recycling facilities are now available for all customers at which you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please contact the local council for details of your local household waste recycling centers.