

iGENIX

MINI FOOD CHOPPER

INSTRUCTIONS FOR USE




**Thank you for purchasing this product.
Please read these instructions carefully before use**

Trouble with your mini chopper? ...

Try our troubleshooting guide on page 4.

If that does not solve the issue contact us ...

		Postal Address: Customer Service Department Pik-a-Pak Electrical Distributors 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR
Tel: 01473 271 272	Fax: 01473 270 733	
Email: info@igenix.co.uk	Website: www.igenix.co.uk	
<i>When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original.</i>		

SAFETY INSTRUCTIONS

Important: This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Please read all instructions carefully before using the mini chopper for the first time.
- Before plugging in the mini chopper, check if the voltage indicated on the rating label corresponds with the main voltage in your home.
- This mini chopper is for household indoor use only. Never use it outdoors.
- Children should not be allowed to play with the mini chopper.
- Never leave the mini chopper unattended whilst plugged into the mains wall socket.
- Always disconnect the mini chopper from the mains power outlet when not in use.
- Close supervision is necessary when the appliance is used around children or persons with reduced physical, sensory or mental capabilities.
- Do not use for anything other than its intended use.
- Keep hands, clothing and utensils away from the chopping blades when in use to avoid risk of serious injury.
- The blades are extremely sharp, please handle with care.
- Do not touch any moving parts.
- The use of attachments not supplied or recommended by the manufacturer may cause fire, electric shock or injury.
- Always ensure that the motor unit is lock securely before operating the mini chopper.
- Do not tamper with the safety lid lock mechanism as this could cause a risk of fire, electric shock or serious injury.
- Do not immerse the motor unit of the mini chopper or cord in water or any other liquid.
- Do not use it in a bathroom, near water, or outdoors.
- Do not open the lid of the mini chopper until the blades stop.
- Do not chop hard objects that cannot be safely broken up by the blade.
- Do not place the mini chopper on or near a hot hob / heated oven.
- Do not pull on the cord to disconnect the plug from the mains wall socket.
- Do not allow the power cord to hang over the edge of the counter where it can be pulled by children.
- Do not use if the power cord or plug is damaged. Do not replace the power cord or any other parts yourself.
- The mini chopper should not be used if it has been dropped or if there are visible signs of damage.
- Always unplug the mini chopper before assembling, disassembling or cleaning.




DO NOT OPEN THE UNTIL THE BLADES HAVE STOPPED

SPECIFICATION

Supply Voltage:	220-240V ~ 50Hz
Maximum Output:	200W

 IG8750 – Mini Chopper at a Glance

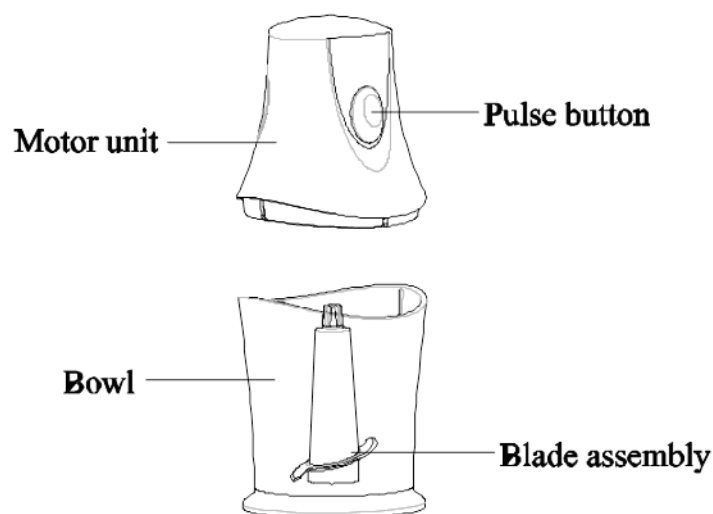

Before First Use

Wash the bowl and blade assembly in warm soapy water. Rinse and dry thoroughly. Please use caution when handling the blade. The bowl and blade are dishwasher safe. Do not immerse the motor housing in water.

Using Your Mini Chopper

- Place the bowl onto a flat stable surface.
- Slide the blade down over the shaft inside the bowl. Be careful not to touch the blade as it is extremely sharp.
- Place your ingredients inside of the bowl.
- Position the motor unit onto the bowl, lining up the grooves in the motor unit and bowl.

⚠ For your protection this unit has a push activation system. The mini chopper will not operate until the motor unit and bowl are held into place correctly. Do not attempt to operate this unit without the motor unit aligned into place.

 
- Press and hold the pulse button. The unit will begin to chop your ingredients. The longer the chopping time, the finer the texture of your ingredients will be. To stop chopping release the pulse button.
The maximum running time for each cycle should not exceed 1 minute as this could cause the motor to over heat. Allow the unit to cool down between each cycle.
- Keep a firm grip on the bowl when the unit is chopping to ensure it does not slip.
- Ensure that the blade has stopped turning before removing the motor unit from the bowl. Hold the blade assembly and carefully remove the blade from the bowl. Be careful not to touch the blade as it is extremely sharp. You can now empty the ingredients out of the bowl
- When you have finished using the mini chopper remove the plug from the mains power outlet.

Chopping Guide

- Ensure the blade and bowl are thoroughly dry before use.
- Chop ingredients into smaller pieces even before chopping.
- Chop small quantities at a time. Do not over fill the bowl.
- Food must be cooked before pureeing.
- Check consistency at regular intervals.
- To ensure even results you may need to scrap from around the side of the bowl using a spoon. Do not use your fingers. Always switch off and unplug the mini chopper before scraping the bowl.
- Hard or rough ingredients can dull the interior of the chopping bowl over time. This will not affect the choppers performance.
- Carrots etc. can discolour the plastic parts. We recommend cleaning these parts immediately after use to prevent this.

Cleaning and Maintenance

- Unplug the mini chopper from the mains power outlet.
- Wash the bowl and blade assembly in warm soapy water. Rinse and dry thoroughly. Please use caution when handling the blade as it is extremely sharp. The bowl and blade are dishwasher safe.
- Wipe the motor unit with a soft damp cloth to clean. Do not use abrasive cleaning pads or chemicals.
- Do not immerse the motor unit in water or any other liquid.

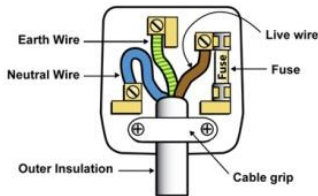

Changing the Plug

This mini chopper must be earthed. Fit a 3A fuse in a 13A BS1363 plug. Fit the green/yellow wire to E, the blue wire to N and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is fitted. If you remove the plug, dispose of it.

Troubleshooting

If you are having problems with your product please use our troubleshooting guide below. If you are unable to resolve the issue using the guide please ring our Customer Service Department on 01473 271 272. Please have the model code, batch number and purchase information available.

Problem	Possible Cause	Solution
The mini chopper does not work.	<ol style="list-style-type: none"> 1. The motor unit is not correctly aligned in place 2. Not properly plugged into the mains wall socket. 3. No electricity in the mains wall socket. 4. The motor may have overheated 	<ol style="list-style-type: none"> 1. Please ensure that the bowl and motor unit is aligned and pushed into place. If not the chopper will not operate 2. Plug in firmly. 3. Check fuse or breaker. 4. The chopper should only be run continuously for a maximum time of 1 minute to prevent the motor from over heating. After 1 minutes use allow the hand mixer to cool down for 10 minutes.

Guarantee Information



This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.

The warranty **does not** cover consumable parts that require replacement under normal use or accessories. This includes beaker, belts, and accessory attachments.

1. If a fault develops within 28 days of purchase the item should be returned to the place of purchase for exchange.
2. If the fault develops after 28 days and within 24 months of purchase please contact our customer service department 01473 271 272 or write to us at the address detailed on page 5.

Please quote the model number which begins **IG**, the 'Batch Number' beginning **'5'** and give details of the exact fault.

We will then decide whether to repair or replace the item. You will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced under guarantee within 2 years, the guarantee for the replacement item will be calculated from the purchase date of the original.

Before calling the Customer Service number please ensure you have checked the Troubleshooting guide.

IGENIX

Tel: 01473 271 272

Fax: 01473 270 733

Email: info@igenix.co.uk

 
Website: www.igenix.co.uk

Postal Address:

Customer Service Department
Pik-a-Pak Electrical Distributors
38 Bluestem Road,
Ransomes Europark,
Ipswich, IP3 9RR

*When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase.
Please retain your original*

Disposal of Old Electrical Appliances



The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Disclaimer

Updates to hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.



Follow us on Twitter
[@Igenix_Products](https://twitter.com/Igenix_Products)

View the range online at www.igenix.co.uk