

**furniture**123

# USER MANUAL



## **ELECTRIC FIREPLACE 60” AGL017**

Thank you for choosing this electric fireplace.  
Please read this manual before using or installing  
the electric fire and keep it safe for future reference.

# CONTENTS

SAFETY	3
PARTS SUPPLIED	7
INSTALLATION	7
OPERATION	9
REMOTE CONTROL	12
CARE AND MAINTENANCE	13
BATTERY WARNING	14
SUPPORT	15
TECHNICAL SPECIFICATIONS	15
PRODUCT FICHE	16

## SAFETY INFORMATION

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

- **IMPORTANT:** Read all instructions and warnings carefully before starting installation. Failure to follow these instructions may result in a possible electric shock or fire hazard and will void the warranty.
- Before connecting the appliance, be sure that the mains voltage available matches that specified on the rating plate and that the outlet is suitably grounded.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate, or clean the appliance or perform user maintenance.
- Children under 3 years should be kept away unless continuously supervised.
- Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
- **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket outlet.
- **CAUTION:** In order to avoid a hazard due to the inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the user or utility.
- Do not attempt to repair, disassemble, or modify the appliance. This unit contains no user-serviceable parts.
- Always unplug or disconnect the appliance from the mains power supply when not in use, or when moving or cleaning it. Do not pull the cord to unplug the heater.

- Keep the heater clean. Do not allow any object to enter the ventilation or exhaust opening, as this may cause electric shock, fire, or damage to the heater.
- Do not use the appliance for other than its intended use. It is designed for domestic indoor use only.
- There may be a trace of odour during the first few minutes of initial use or after a storage period. This is normal and will quickly disappear.
- If the glass is damaged, do not use the heater to avoid a hazard.
- Avoid the use of an extension cord, as the cord may overheat and cause a risk of fire.
- This fireplace is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. If provided, use handles when moving this appliance.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3 feet from the front and sides of this appliance.
- This appliance is designed for indoor use only and is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate this appliance where it may fall into a bathtub or otherwise become exposed to water.
- Do not run the cord under carpeting. Do not cover the cord with throw rugs, runners or similar. Ensure the cord is kept away from traffic areas and in a position that would not present a trip hazard.
- To disconnect this appliance, turn the controls to the off position, then remove the plug from the outlet.
- This appliance has hot and arching or sparking parts inside. Do not use it in areas where gasoline, paint, or any flammable liquids are used or stored.
- This appliance should not be used as a drying rack for clothing, nor should Christmas stockings or decorations be hung on or near it.
- This electric fire is an instant heat source to warm up a room and is great for visual room ambience. It doesn't necessarily need to be used as a constant or permanent home heating source.
- Clean the fire regularly to prevent the build-up of hairs, dust, or lint around the fire, as this may cause the outlet to become blocked.
- Do not use aerosols or steam cleaners on or around the fire.

## **MANUAL HANDLING**

- The heater must not be moved while in use. Please allow a suitable amount of time for the unit to cool before attempting to move it.
- One person should be sufficient to lift the heater. If, for any reason, it is considered too heavy, then obtain assistance.

- When lifting, always keep your back straight. Bend your legs and not your back.
- Avoid twisting at the waist. It is better to reposition your feet.
- Avoid upper body / top heavy bending. Always bend from the knees rather than the waist. Do not lean forward or sideways whilst handling the heater.
- Always grip with the palm of the hand. Do not use the tips of your fingers for support.
- Always keep the heater as close to the body as possible. This will minimise the cantilever action.
- If required, use gloves to provide additional grip.
- Always use assistance if required.

## ELECTRICAL SAFETY

 
The heater must not be located under an electrical socket; the socket must always be accessible in order to disconnect the heater from the electrical supply for maintenance and cleaning.

**Important:** This heater must be earthed. The mains supply must be safely routed to an electrical socket from the heater.

- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is supplied with a BS1363 3-pin plug fitted with a 13-amp fuse. Should the fuse require replacement, it must be replaced with a fuse rated at 13 Amp and approved to BS1362.
- In the event the mains plug has to be removed or replaced for any reason.

**NOTE:** The wires in the mains lead on this appliance are coloured in accordance with the following code:

- **Green and Yellow** - Earth
- **Blue** - Neutral
- **Brown** - Live

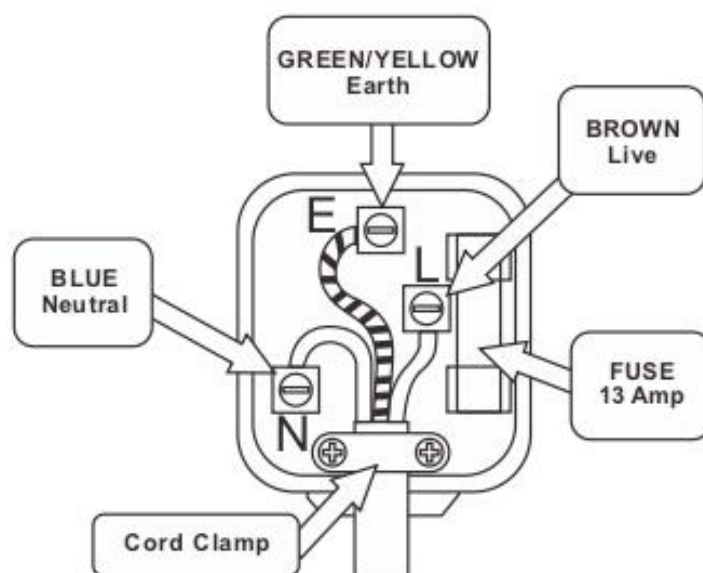









If the wires do not match the colour coding above, please follow the below.

- The green and yellow wire must be connected to the terminal, which is marked with the letter E or with the earth symbol  $\perp$ . This colouring will not change.
- The blue wire may be black and must be connected to the terminal marked N.
- The brown wire may be red and must be connected to the terminal marked L.

**IMPORTANT:** Any cut-off plug should be disposed of safely to prevent a hazard. There is a danger of electric shock if a cut-off plug is inserted into a socket outlet.

## PARTS SUPPLIED

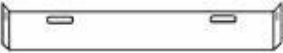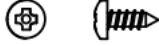**NOTE:** Pictures and contents in this manual may differ from the product due to continuous product improvement.

DESCRIPTION	IMAGE	QTY	DESCRIPTION	IMAGE	QTY
Fireplace (Mounting bracket attached)		1	Wall Plug (18 used)		20
Remote		1	ST4*40 Screw (18 used)		20
Bracket		4	ST4*10 Locking Screw (8 used)		10
Crystal Bag		2	Manual		1

## INSTALLATION

 
You can install the fireplace in 2 different ways: wall-mounted or embedded.

### WALL MOUNTED

1. Remove the mounting bracket from the back of the fireplace by removing the screws.
2. Fix the mounting bracket to the wall using 12 ST4\*40 screws and 12 wall plugs.


**TOP TIP:** Use a spirit level to ensure the bracket is level.

3. Hang the fireplace onto the hook then secure using 3 ST4\*10 screws.
4. Add all crystals and the fixed piece or the decoration you desire.

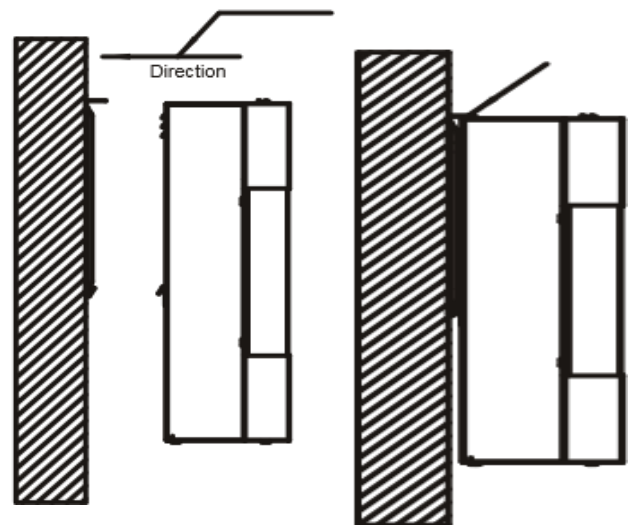

## EMBEDDED

 
1. Remove the mounting bracket from the back of the fireplace by removing the screws.
2. Fix 2 brackets to either side as shown in the image using 2 ST4\*40 screws per bracket.
3. Using 2 people, lift the fireplace and insert into your embedded wall.
4. Secure the fireplace using 2 ST4\*10 locking screws for each bracket.
5. Add the decorations you desire, if you are only using the fixed piece, you can add this at any step.

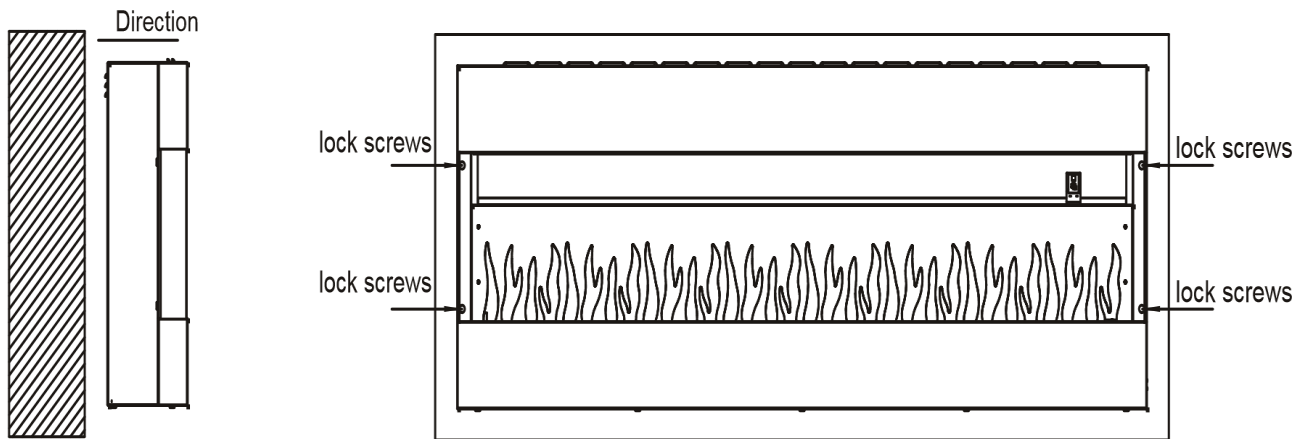



## OPERATING BY MANUAL BUTTON

 **NOTE:** The manual control panel on the fire only has some basic functions in case you lose the remote. Please use the remote to change most functions.

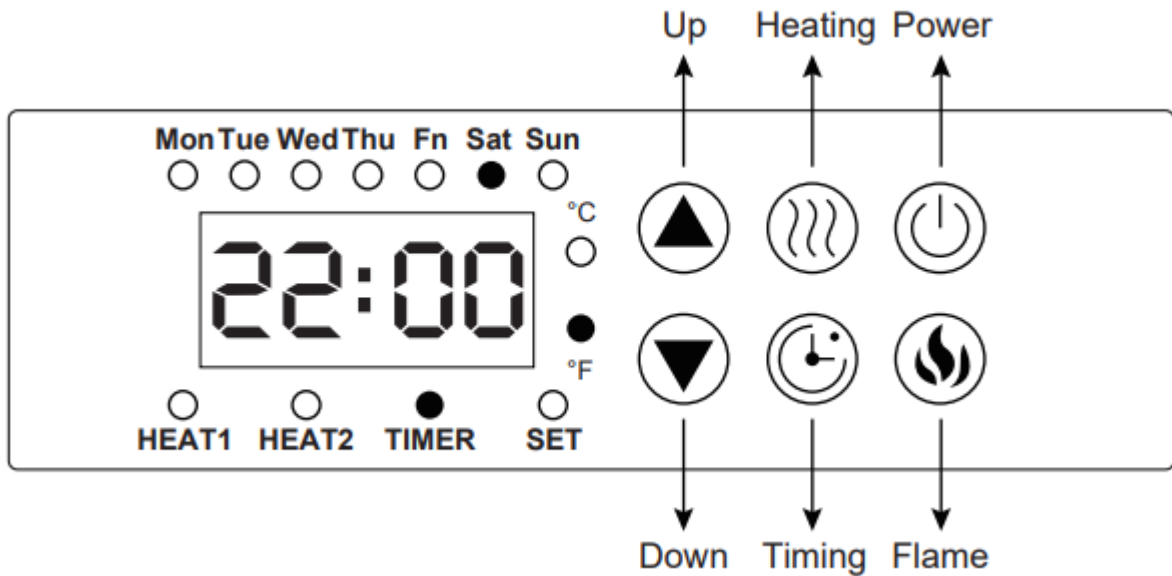

**POWER BUTTON:** Power ON/OFF.

**FLAME BUTTON:** Press once till the digital tube displays “F0”; this is the flame colour selection. Press up or down to cycle between the colour selections. F0-F9 will be displayed on the display as the flame colour changes.

Press twice until the digital tube displays “C0”, the colour selection of charcoal fire. Press up or down to cycle between the colour selections. C0-C9 will be displayed in the colour cycle selection.

**NOTE:** Hold the flame till the digital tube displays “E0.” When E0 is displayed, you can press up or down to select E0 or E1.

E0 means the ERP weekly timing and window detection function is not turned on.

E1 means ERP weekly timing and window detection can be set to on. The SET setting indicator will flash as long as the flame button is pressed.

**HEATING BUTTON:** Press once to turn on the low heating mode. Press twice for high heating mode and three times to turn the heating off. (Remark: For the heating to operate, the indoor temperature must be lower than the set temperature.)

Hold the heating button to turn off the digital screen to switch between Celsius and Fahrenheit by pressing up or down to cycle through. The SET setting indicator light will be flashing.

**UP BUTTON:** Press repeatedly to increase the set temperature. The SET setting indicator will be flashing, and the current temperature unit light will be on.

**DOWN BUTTON:** Press repeatedly to decrease the set temperature. The SET setting indicator will be flashing, and the current temperature unit light will be on.

#### **TIMING BUTTON:**

1. Press the timing button once to enter the weekly timing function.
2. To turn on, the timing and setting lights will flash together.
3. Press up or down to select "on" or "off" for the weekly timing function. The timing light is turned off when the weekly timing function is off. The timing lamp lights up when the weekly timing function is turned on.
4. After setting the weekly timing to "on" or "off", press the timing button again to enter the Monday timing. At this time, the hour and two digits of the digital clock will be set, the SET setting indicator will flash, and the TIMER clock will indicate. The timing light is on.
5. Press up or down to enter the hour setting of this day.
6. After setting the hour, press the timing button again; the minute digit tube flashes into the minute setting.
7. After the minute is set, press the timing button again to enter this day's shutdown time and select your shutdown hour.
8. Then press the timing button to set the shutdown minute.
9. After the setting is completed, press the timing button to enter the timing setting of the next day, and repeat instructions 4-9 until every day of the week has been set.

### **CURRENT CLOCK SETTING:**

1. Hold the timing button to enter the current time setting. First, the LED of the daylight will light up and flash.
2. Press up or down to select which day of the week.
3. After completing the selection, press the timing button to confirm.
4. At this time, enter the current time setting and press up or down to select the time; set the minutes after setting the hour.
5. Once completed, press the timing button to exit the current time setting.

### **OPEN WINDOW DETECTION :**

The indoor temperature rises when the product and heating functions are turned on. When the ambient temperature gradually reaches the set value, the product defaults to a stable state, and the current temperature is automatically recorded as a reference value. If the indoor temperature is lowered by 5 °C or more within 10 minutes, and this continues for 30 minutes, the auto window detection mode will activate and stop the unit from heating to save energy.

Hold the heating button to display E0. When E0 is displayed, you can press up or down to select the E0 and E1 cycles.

E0 means the ERP window detection function is not turned on.

E1 means the ERP window detection function is turned on.

**Note:** Open window detection can only be set from the main control panel

## REMOTE CONTROL

The buttons on the remote match the functions previously described and include some further ones.

1. Charcoal Fire colour
2. Flame adjustment
3. Charcoal lock to currently displayed colour displayed when in C0 Mode (Loop)
4. Flame lock to currently displayed colour displayed when in F0 Mode (Loop)
5. Change the desired Temperature.
6. Change the heat setting between low, high and off.
7. Set Current Time and Day:

- Press once to adjust the day using the arrow buttons.
- Press again to adjust the hour value.
- Press again to adjust the minute values.
- Press to start the clock.

8. 7 Day Timer

 
9. Up

10. Down

11. Fahrenheit and Celsius Switching:

Switch between showing the temperature in °C or °F.

12. Standby

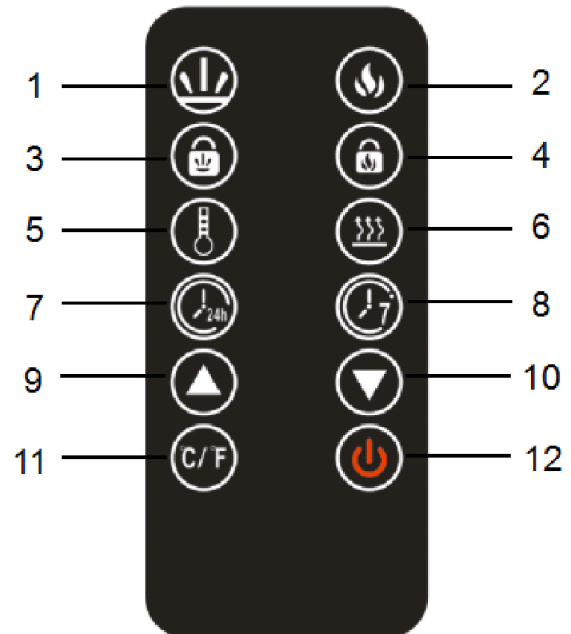

## CARE AND MAINTENANCE

**IMPORTANT:** Before any cleaning or maintenance, the unit needs to be completely disconnected from power.

Dust can be removed by lightly wiping the glass surface with a clean, lint-free cloth or paper towel. Use a damp cloth with a good-quality household glass cleaner to remove fingerprints or other marks. The front glass panel should be thoroughly dried before reusing the heater.



### **CAUTION:**

- Do not use an abrasive cleaner on the glass panels.
- Do not spray liquids directly onto any surface of the unit.
- Do not clean the glass on the inside of the unit, as this may cause damage to the surface.

## TROUBLESHOOTING

Most problems are simple to resolve - please refer to the following table before calling a service engineer:

Problem	Possible Cause	Check
The fire has stopped working.	The fire has overheated, the thermal safety device has been activated, or a circuit breaker has tripped.	Check if there is power to the socket where the fire is connected, check the fuse in the plug, and leave for 10 minutes in case of thermal cut-out.
The flame is not moving.	Flame motor defective	Contact the retailer or manufacturer.

## SERVICING

 
It is hazardous for anyone other than a qualified service technician to carry out any service or repair operation involving removing any components.



## BATTERY WARNING

### KEEP OUT OF REACH OF CHILDREN

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

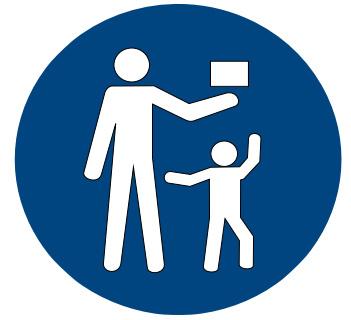

- If the battery compartment (if applicable) does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed, or placed inside any part of the body, seek immediate medical attention

## THERE MAY BE NO OBVIOUS SYMPTOMS OF BATTERY INGESTION

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's oesophagus (food pipe). There are no specific symptoms associated with this. The child might:

- cough, gag or drool a lot;
- appear to have a stomach upset or a virus;
- be sick;
- point to their throat or stomach;
- have a pain in their abdomen, chest or throat;
- be tired or lethargic;
- be quieter or more clingy than usual or otherwise "not themselves";
- lose their appetite or have a reduced appetite; and
- not want to eat solid food / be unable to eat solid food.

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.

A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If the child does this seek immediate medical help.

- The lack of clear symptoms is why it is important to be vigilant with "flat" or spare button or coin batteries in the home and the products that contain them.

## WASTE ELECTRICAL RECYCLING

This symbol indicates that this product is classed as Electrical or Electronic Equipment and should not be disposed of with other household waste.



The Waste Electrical and Electrical Equipment (WEEE) Directive has been introduced across the European Union:

- To recycle waste electrical products using the best available recovery and recycling techniques to minimise environmental impact.
- To treat any hazardous substances.
- To avoid increasing landfills.

WEEE products should be disposed of by handing them over at a designated collection point.

**For more information about where you can drop off your waste product for recycling, please contact your local authority.**

## SUPPORT

For your convenience, please make these simple checks before calling the service line. If the unit still fails to operate, call 0871 620 1057 or complete the online form.

1. Is the unit plugged into the mains?
2. Is the fuse OK?
3. Switch the unit off and wait ten minutes to see if the issue is resolved. Restart the unit.

**Office hours: 9 AM - 5 PM, Monday to Friday**

BuyItDirect  
Unit 2A, Trident Business Park,  
Neptune Way, Leeds Road,  
Huddersfield, HD2 1UA.



## TECHNICAL SPECIFICATION

Description of Product	Wall-mounted & Embedded
Model	AGL017 60"
Rated Voltage	220-240V ~
Rated Frequency	50 Hz
Rated Power	Max 1400W
Dimensions (W) x (H) x (D)60"	1524 x 553 x 177mm
Weight 60"	45.8Kg

Model Identifier: AGL017					
Item	Symbol	Value	Unit	Item	Unit
<b>Heat Output</b>				<b>Type of heat input, for electric storage local space heaters only (select one)</b>	
Nominal heat output	$P_{nom}$	1.2	kW	manual heat charge control, with integrated thermostat	No
Minimal heat output	$P_{min}$	N/A	kW	manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	$P_{max}$	N/A	kW	electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				fan assisted heat output	No
At nominal heat output	$e_{lmax}$	N/A	kW	<b>Type of heat output/room temperature control (select one)</b>	
At minimum heat output	$e_{lmin}$	N/A	kW	single stage heat output and no room temperature control	No
In standby mode	$e_{lsb}$	N/A	kW	two or more manual stages, no room temperature control	No
				with mechanical thermostat room temperature control	No
				with electronic room temperature control	No
				with electronic room temperature control plus day timer	No
				with electronic room temperature control plus week timer	Yes
				<b>Other control options (multiple selections possible)</b>	
				room temperature control with presence detection	No
				room temperature control, with open window detection	Yes
				with distance control option	No
				with adaptive start control	No
				with working time limitation	No
				with black bulb sensor	No
Contact Details	BuyItDirect, Unit 2A, Trident Business Park, Neptune Way, Leeds Road, Huddersfield, HD2 1UA. The Black Church, St Mary's Place, Dublin 7.				